

[accen-*tú*-ate]




SLICK 


SET UP INSTRUCTIONS

Once you have set up your artwork using the Accentuate Design Engine:


1. Open your print ready PDF the Design Engine has produced.
2. Place pre perforated sheets in printer making sure the white side of the sheet is facing the side that prints.

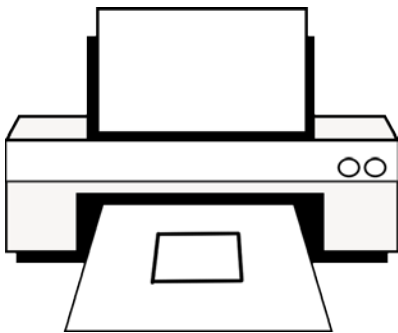


3. Print the PDF making sure to use the letter setting @100%

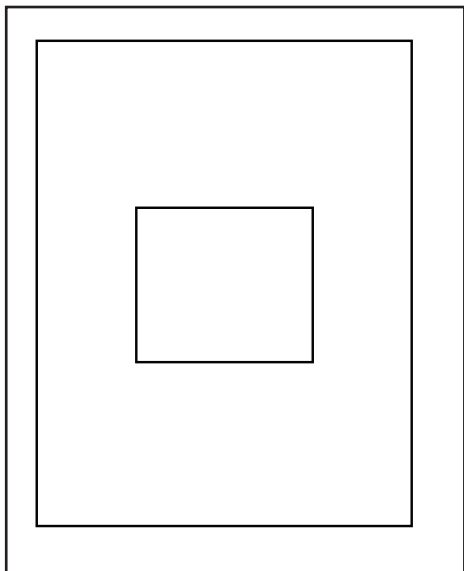

4. Remove included gel dome from its backing and place on top of artwork aligning as close as possible to the perforations on all sides. Then use the supplied felt squeegee to work out any bubbles between the art and gel dome

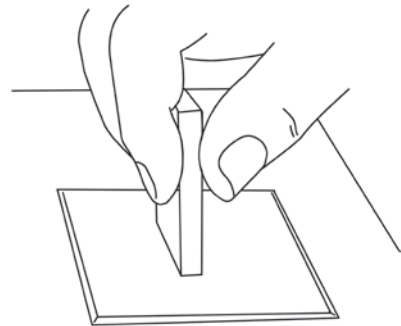

6. Next remove the gel dome with the attached art from the backing of the printed sheet and place on the recessed area of your kit.

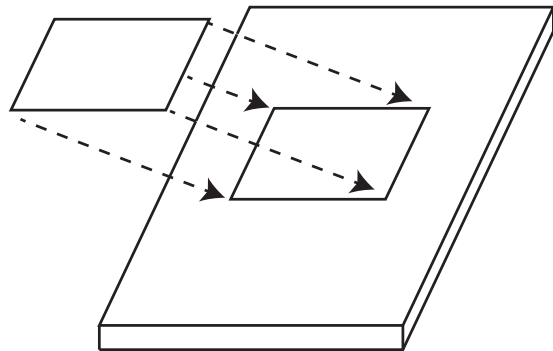

.....**Done!)**